

Super Sharpener #1

Portable Knife & Scissor Sharpener




SHARPENS:

1. Knives
2. Scissors
3. Serrated Knives
4. Meat Cleavers
5. Electrical Knives
6. Razor Blade Knives
7. All V-Blade Instruments

Warning! Improper use of SS#1 and/or failure to follow instructions can result in injuries. Correct use is the easy way and the safe way, so always use exactly as instructed. Keep your fingers behind the curved guard, and your thumb securely on the thumb rest indentation, never in front of it.

Instructions must be followed correctly!

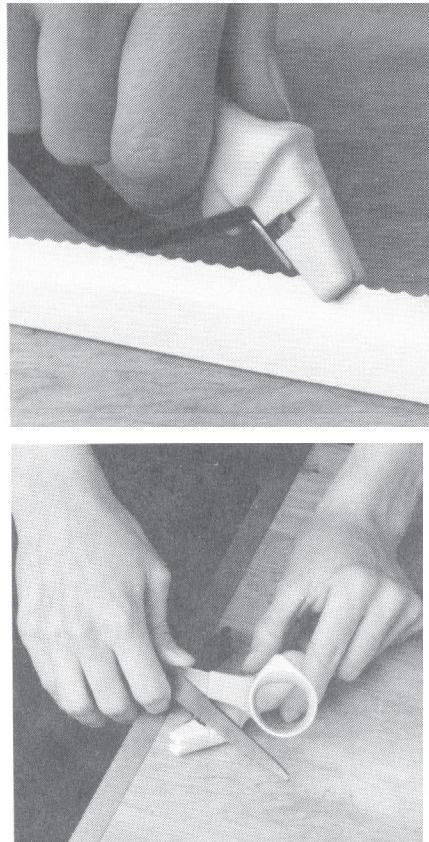

To Sharpen Knives

(including serrated)

1. Place the knife with the cutting edge of the knife facing up on an even and stable surface.
2. Line the knife guide up with the blade to be sharpened and draw from heel to point 4-5 times as shown in the picture.

To Sharpen Scissors

1. Place the sharpener flat and draw the scissors through slot as shown in the picture.
2. Draw from heel to point 4-5 times as shown in the picture.